

How to locate the contents gauge on your LPG tank



For above ground tanks, the contents gauge will be on the top of the tank, this will either be to the side or, under the tank hood.

For underground tanks, the contents gauge will be under the lid, within the tank hood.

The contents gauge may have a plastic cover or metal flip lid and is a dial with percentage indication from 0 – 95%

How to read the content gauge of your LPG Tank



When your tank level reaches 25%, you should call us on 0345 450 3121 to re-order.

If you are a Top Up customer and your gauge goes below 20%, you shouldn't worry as you still have enough gas. Just give us a call on 0345 450 3121 and we will advise you when your top up is due.



We will fill your tank to a maximum of 85%. This allows room for the gas to expand.

As you use your LPG appliances the level will gradually reduce.